


# Cartridge Changeout Curve for Coalescer & Aquacon® Cartridges at 15 PSID Changeout - Decal # 1979



**EXAMPLE:** A 600 GPM vessel is operating at 300 GPM (50% of system flow limit). If the pressure differential is less than 6.5 psid, the cartridges do not require changing. However if the pressure differential is 6.5 psid or more, or if the cartridges have been in service for one year, the cartridges are due for changeout.

***For curve with 25 psid changeout,  
please see or request Decal #1846***

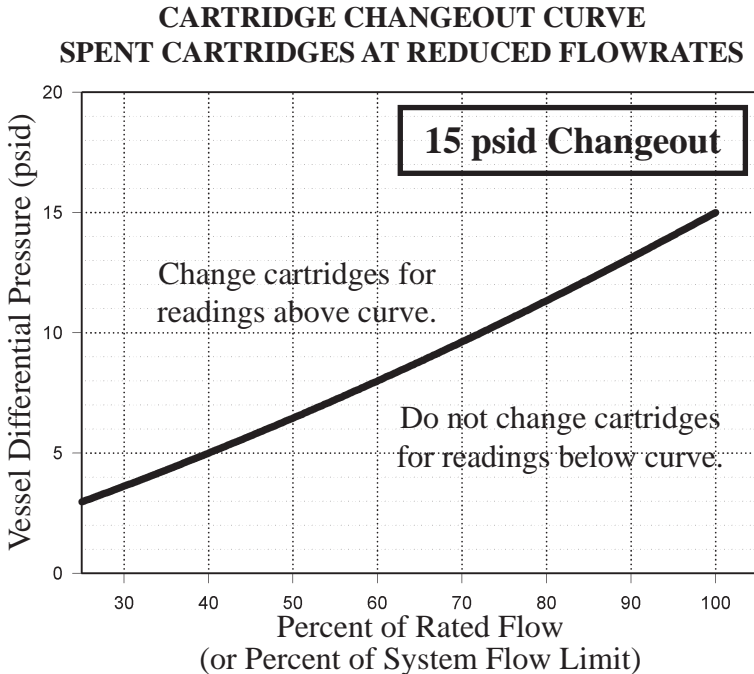

1210 Garden of the Gods Road, Colorado Springs, CO 80907-3410  
Phone: 791.531.5855 • Fax: 719.531.5690 • [www.velcon.com](http://www.velcon.com)